

PARTS LIST

PUMP


AG H

Keep this parts lists with Installation, Operation and Maintenance Instructions.


To order the required spare parts, indicate the desired Reference(s).

◆ Sets of parts or parts available to order.


AG H

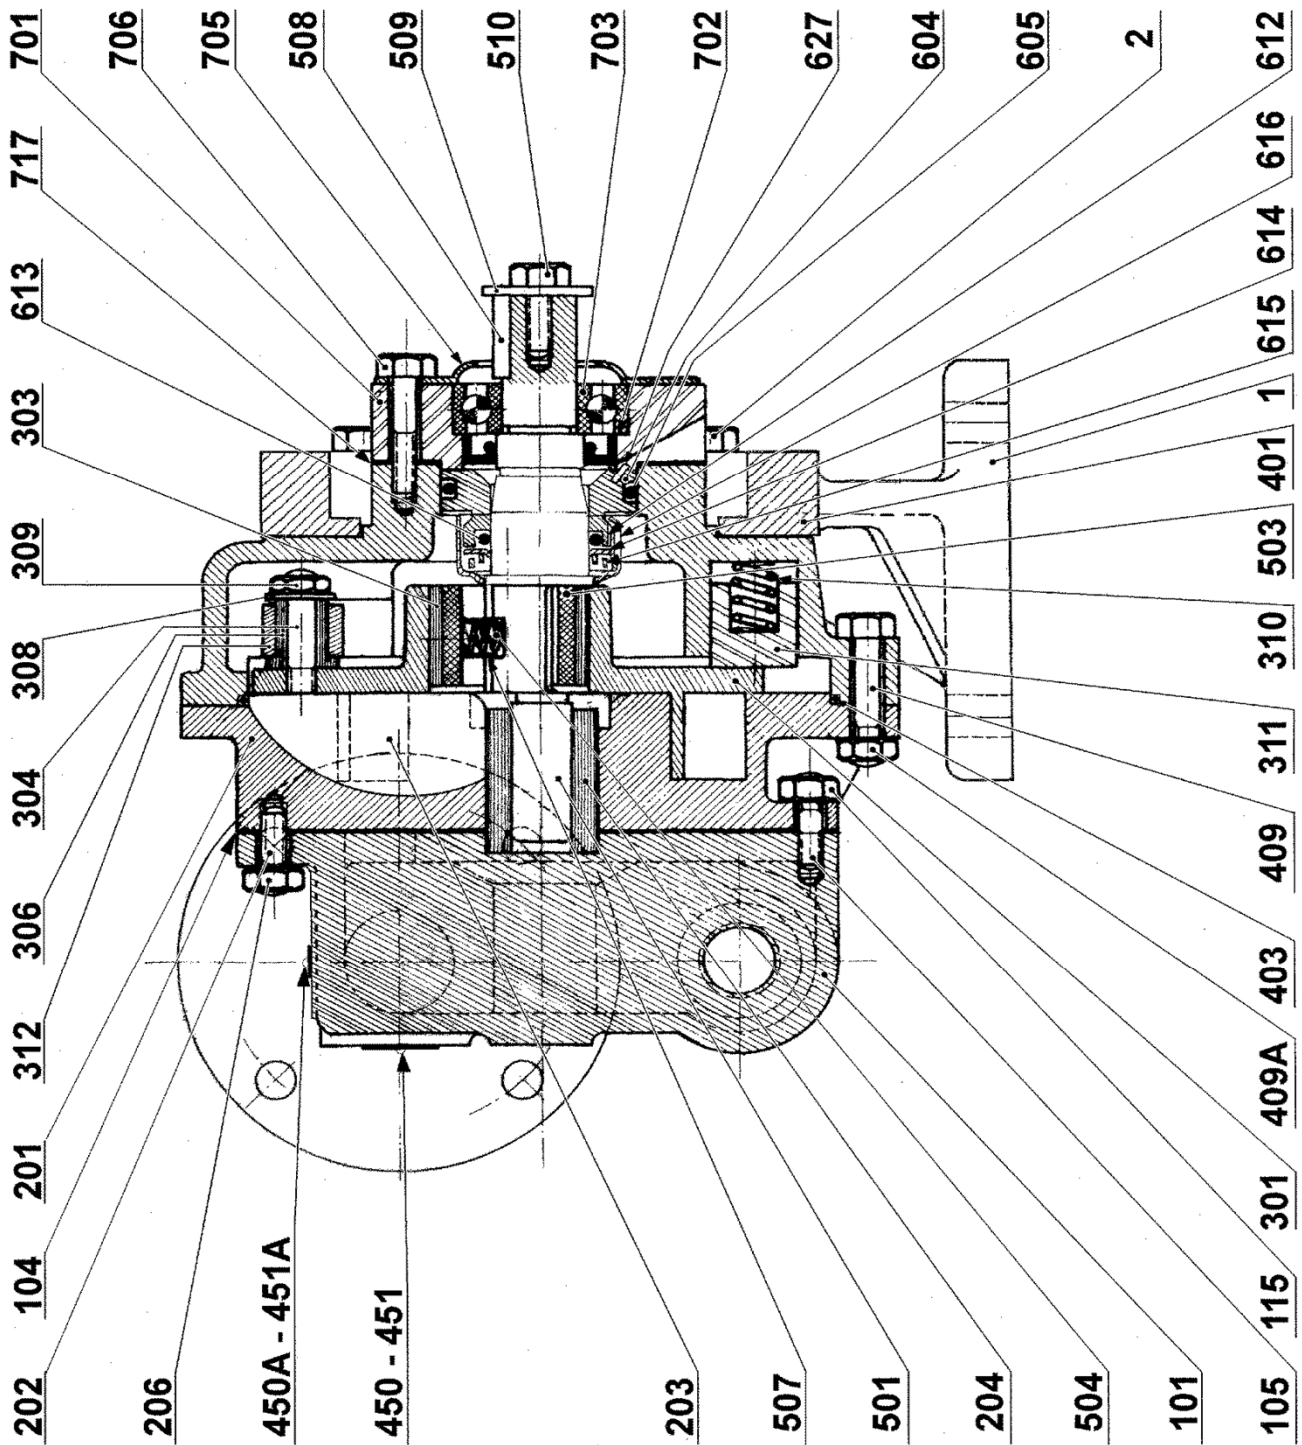

Mechanical seal

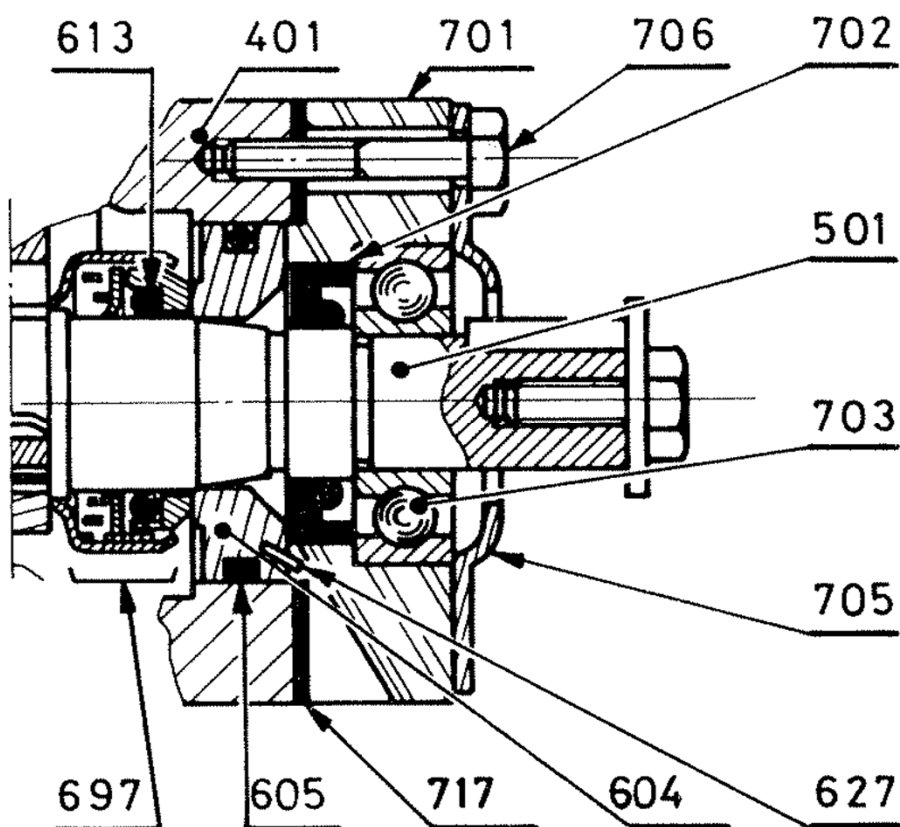

Bypass

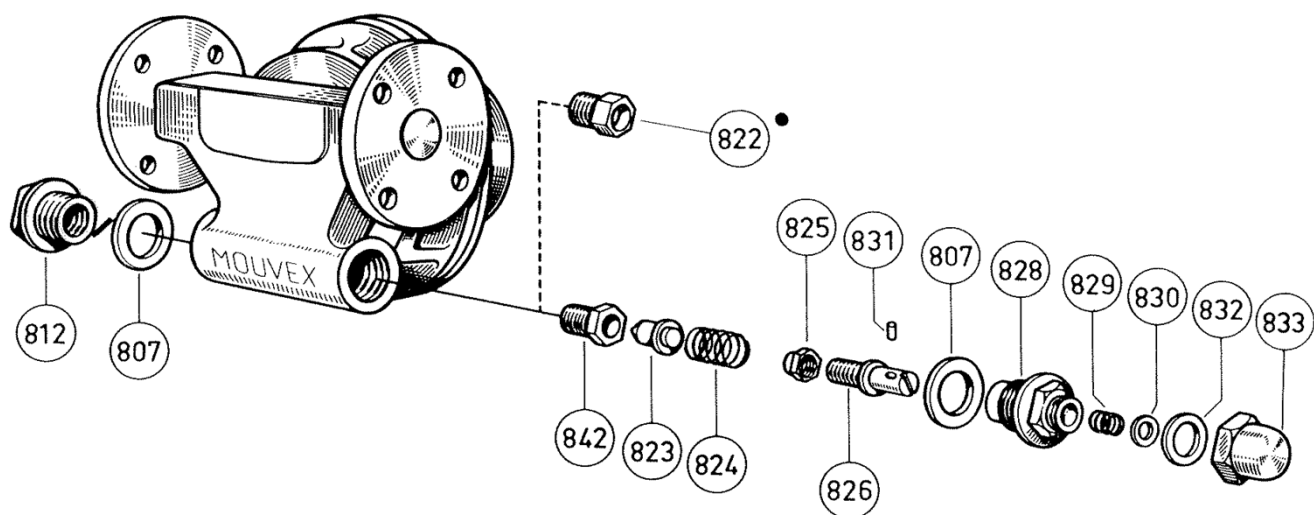

AG H

* 1, 2, 4... : Quantity in equipment - (1), (2), (4)... : Quantity in kit

Item	Available	Description	Qty*	Ref.	Maintenance kit	Wear part
98	◆	FULL SET OF SCREWS	1	301309.00		
105		STUD	(5)			
115		NUT	(5)			
202		STUD	(1)			
206		NUT	(1)			
409		SCREW	(6)			
409A		NUT	(6)			
706		SCREW	(3)			
99	◆	FULL SET OF SEALS FKM	1	301311.00	■	
104		SEAL	(1)			
403	◆	COMPLETE FRONT COVER SEAL	1	200831		
100	◆	MAIN BODY, COMPLETE	1	301290.00		
101		MAIN BODY	(1)			
105		STUD	(5)			
115		NUT	(5)			
200	◆	CYLINDER, COMPLETE	1	301293.00	■	
201A		CYLINDER + BULKHEAD + BUSHING	(1)			
201		CYLINDER	(1)			●
203		BULKHEAD	(1)			
204	◆	BUSHING	1	201305	■	●
202		STUD	(1)			
206		NUT	(1)			
300	◆	COMPLETE PISTON	1	303002.00	■	●
3010		PISTON + BLOCK PIN	(1)			
303	◆	PISTON BUSHING	1	201306	■	●
3980	◆	SLIDE BLOCK, COMPLETE	1	305238.00		
306		BUSHING	(1)			
308		WASHER	(1)			
309		NUT	(1)			
312		SLIDE BLOCK	(1)			
400	◆	COMPLETE FRONT COVER	1	301297.00		
399	◆	GUIDE BLOCK, COMPLETE	1	301299.00		
310		SPRING	(3)			
311		BACK PISTON SUPPORT	(3)			●
401		FRONT COVER	(1)			
403	◆	COMPLETE FRONT COVER SEAL	1	200831		
500	◆	SHAFT COMPLETE	1	301301.00	■	
501	◆	SHAFT	1	203480		
503	◆	PISTON BEARING	1	203482		●
598	◆	BEARING SPRING COMPLETE	1	301302.00		
504		SPRING	(1)			
507		BUSHING	(1)			
599	◆	COMPLETE KEY	1	301303.00		
508	◆	KEY	1	203849		
509		WASHER	(1)			
510		SCREW	(1)			
600	◆	MECHANICAL SEAL BLOCDIR LR VT	1	301305.00	■	
610		STATIONARY SEAL FACE COMPLETE	(1)			
604		STATIONARY SEAL FACE	(1)			
605		SEAL	(1)			
627	◆	PIN	1	200139		●
697		ROTATING PART	(1)			●
612		SEAL HOUSING	(1)			
613		SEAL	(1)			
614		SPRING GUIDE	(1)			
615		SPRING	(1)			
616		CAGE	(1)			

AG H

* 1, 2, 4... : Quantity in equipment - (1), (2), (4)... : Quantity in kit

Item	Available	Description	Qty*	Ref.	Maintenance kit	Wear part
699	◆	SET OF MECHANICAL SEAL SEALS	1	301313.00		
605		SEAL	(1)			
613		SEAL	(1)			
700	◆	BALL BEARINGS COMPLETE	1	301308.00		
701		BEARING CAGE	(1)			
702		LIP SEAL	(1)			
703	◆	BALL BEARING	1	200546		●
705		BEARING COVER	(1)			
717		GASKET	(1)			
840	◆	BYPASS COMPLETE	1	301314.00		
812		PLUG	(1)			
824	◆	SPRING N°4	1	201123		
833		BYPASS CAP	(1)			
861	◆	ADJUSTING VALVE SEAT	1	301315.00		
823		COMPENSATED VALVE	(1)			
842		VALVE SEAT	(1)			
898	◆	SET ADJUSTING SCREW	1	301316.00		
826O		ADJUSTING SCREW	(1)			
825		SPRING GUIDE	(1)			
826		ADJUSTING SCREW	(1)			
828		NUT	(1)			
829		SPRING	(1)			
830		WASHER	(1)			
831		PIN	(1)			
899	◆	SET OF BYPASS SEALS	1	301317.00	■	
807		SEAL	(2)			
832		SEAL	(1)			