
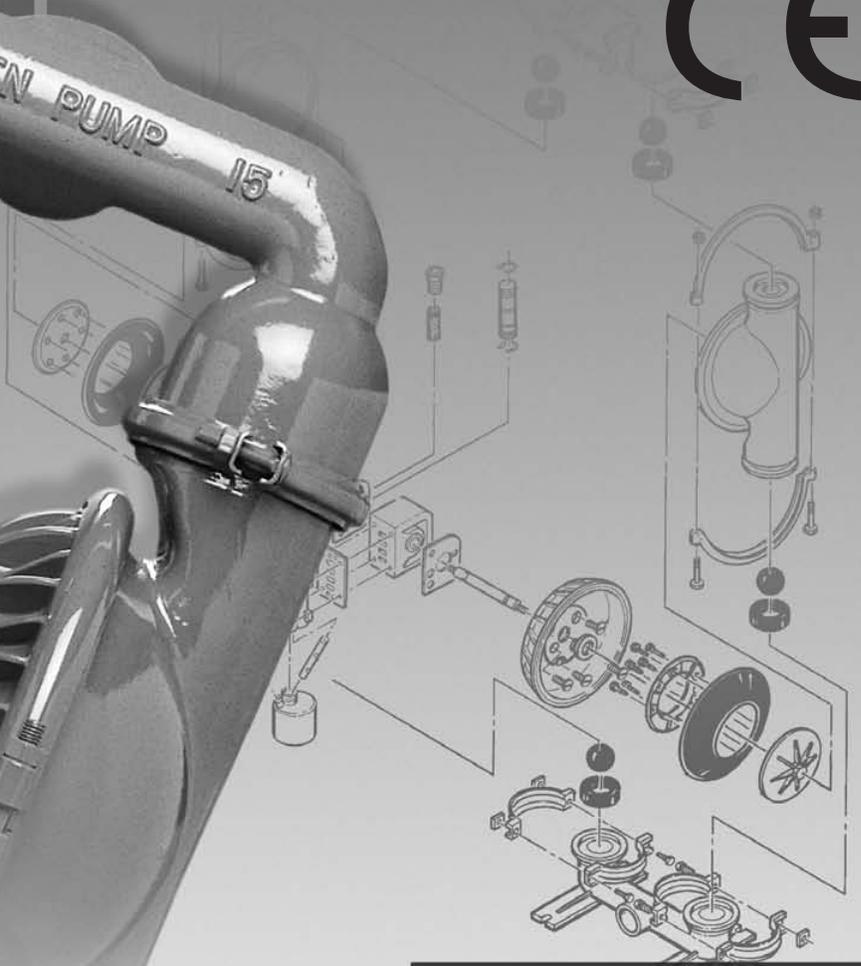


BIOPHARM™

T15

Engineering Operation & Maintenance

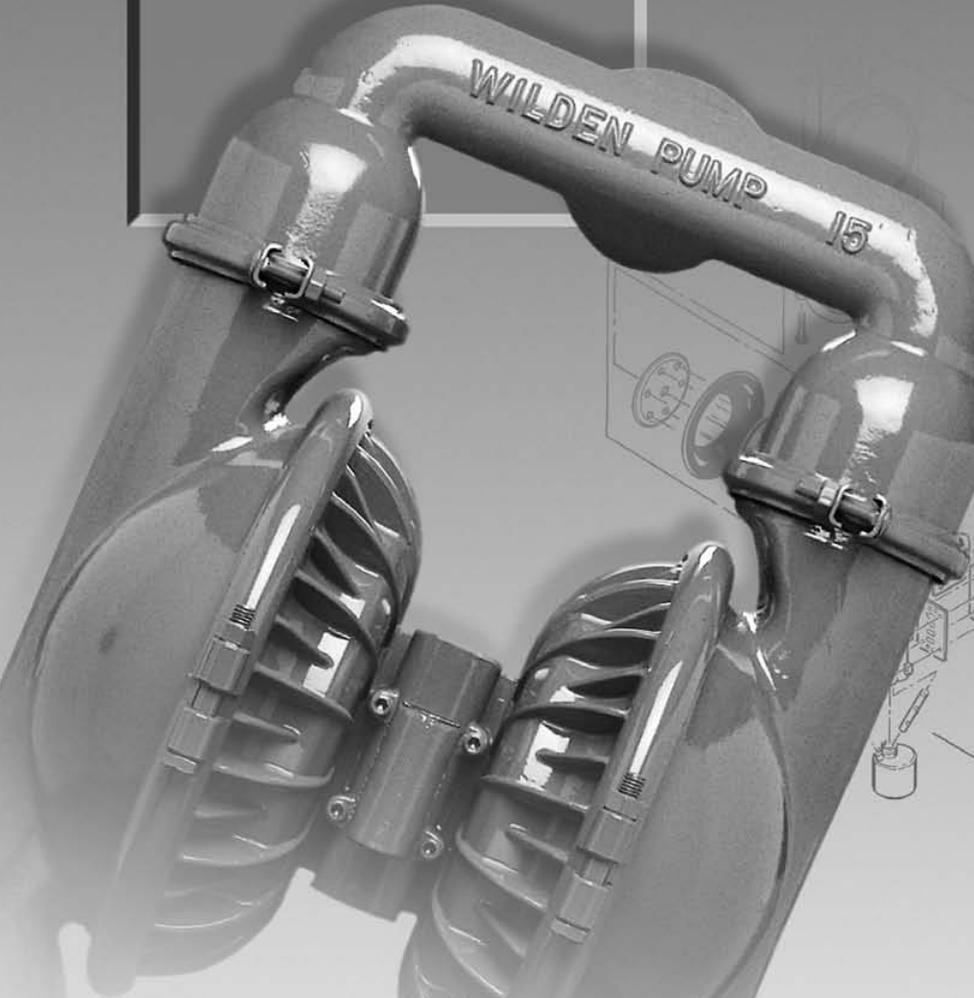


TURBOFLO™
PROGRESSIVE PUMP TECHNOLOGY

**Metal
Pumps**


TABLE OF CONTENTS

	PAGE #
SECTION 1 – PUMP DESIGNATION SYSTEM	1
SECTION 2 – HOW IT WORKS	2
SECTION 3 – CAUTIONS	3
SECTION 4 – DIMENSIONAL DRAWINGS	
A. Model T15 METAL Air-Controlled	4
B. Model T15 METAL BIOPHPARM Air-Controlled	4
SECTION 5 – PERFORMANCE CURVES	
A. Model T15 METAL Teflon®-Fitted	5
SECTION 6 – SUCTION LIFT CURVE	
A. Model T15 METAL Air-Controlled	5
SECTION 7 – INSTALLATION & OPERATION	
A. Installation – Air-Controlled	6
B. Air-Controlled Operation and Maintenance	7
C. Troubleshooting Turbo-Flo™ Pumps	8
SECTION 8 – DIRECTIONS FOR DISASSEMBLY/REASSEMBLY	
A. Turbo-Flo™ Air Valve/Center Section – Disassembly, Cleaning, Inspection	9
B. Turbo-Flo™ Air Valve/Center Block Disassembly	12
C. Reassembly Hints & Tips, Torque Specs	14
SECTION 9 – EXPLODED VIEW/PARTS LISTING	
A. Model T15 METAL Teflon®-Fitted	16
B. Material Code Designations	18

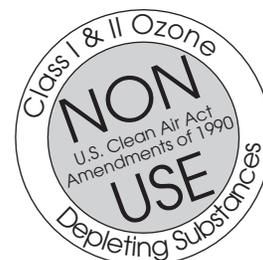

SECTION 1

WILDEN PUMP DESIGNATION SYSTEM

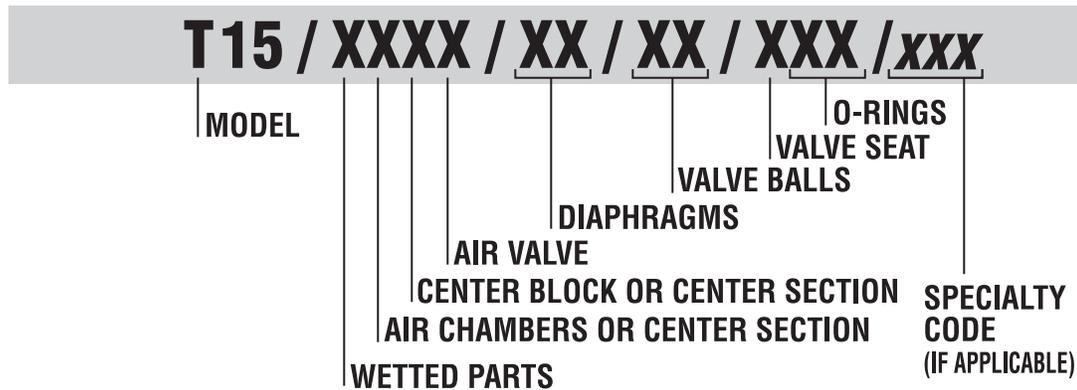

MODEL T15 METAL MATERIAL CODES

WETTED PARTS

H = HASTELLOY®
S = STAINLESS STEEL

AIR CHAMBERS

A = ALUMINUM
N = NICKEL PLATED
S = STAINLESS STEEL
W = CAST IRON

CENTER SECTION

A = ALUMINUM
N = NICKEL PLATED
P = POLYPROPYLENE
S = STAINLESS STEEL

AIR VALVE

B = BRASS
D = BRASS W/OIL BOTTLE
N = NICKEL PLATED
S = STAINLESS STEEL

DIAPHRAGMS

TS = TEFLON® PTFE
W/SANIFLEX™
BACK-UP (White)

VALVE BALL

TF = TEFLON® PTFE (White)

VALVE SEAT

H = HASTELLOY®
S = STAINLESS STEEL

VALVE SEAT O-RING

TF = TEFLON® PTFE

SPECIALTY CODE

(AVAILABILITY VARIES BY MODEL.)

- 900 BioPharm
- 901 BioPharm, BSP
- 902 BioPharm, DIN
- 903 BioPharm, FDA (Tri-Clover® flanges & wing nuts)
- 904 BioPharm, USDA (Food Master)
- 905 BioPharm, 3A (CIP), Wil-Gard 110V
- 906 BioPharm, 3A (CIP), Wil-Gard 220V
- 907 BioPharm, LSH, side ported
- 908 BioPharm, FDA, Accu-Flo, 24V DC coil
- 909 BioPharm, FDA, Accu-Flo, 24V DC x-proof coil
- 910 BioPharm, FDA, Accu-Flo, 24V AC / 12V DC coil
- 911 BioPharm, FDA, Accu-Flo, 24V AC / 12V DC x-proof coil
- 912 BioPharm, FDA, Accu-Flo, 110V AC coil
- 913 BioPharm, FDA, Accu-Flo, 110V AC x-proof coil
- 914 BioPharm, Accu-Flo, 24V DC coil
- 915 BioPharm, Accu-Flo, 24V DC x-proof coil
- 916 BioPharm, Accu-Flo, 24V AC / 12V DC coil
- 917 BioPharm, Accu-Flo, 24V AC / 12V DC x-proof coil
- 918 BioPharm, Accu-Flo, 110V AC coil
- 919 BioPharm, Accu-Flo, 110V AC x-proof coil

NOTE: MOST ELASTOMERIC MATERIALS USE COLORED DOTS FOR IDENTIFICATION.

SECTION 2

THE WILDEN PUMP — HOW IT WORKS

The Wilden diaphragm pump is an air-operated, positive displacement, self-priming pump. These drawings show the flow pattern through the pump upon its initial stroke. It is assumed the pump has no fluid in it prior to its initial stroke.

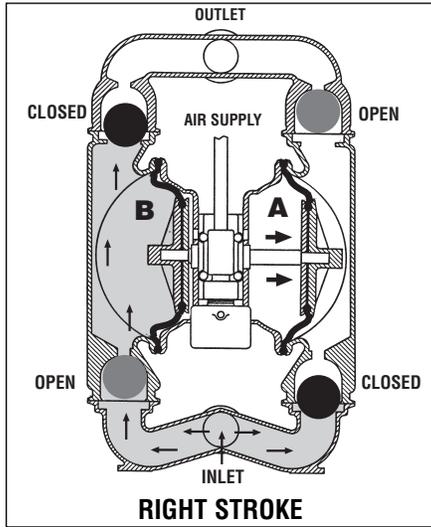


FIGURE 1 The air valve directs pressurized air to the back side of diaphragm A. The compressed air is applied directly to the liquid column separated by elastomeric diaphragms. The diaphragm acts as a separation membrane between the compressed air and liquid, balancing the load and removing mechanical stress from the diaphragm. The compressed air moves the diaphragm away from the center block of the pump. The opposite diaphragm is pulled in by the shaft connected to the pressurized diaphragm. Diaphragm B is on its suction stroke; air behind the diaphragm has been forced out to the atmosphere through the exhaust port of the pump. The movement of diaphragm B toward the center block of the pump creates a vacuum within chamber B. Atmospheric pressure forces fluid into the inlet manifold forcing the inlet valve ball off its seat. Liquid is free to move past the inlet valve ball and fill the liquid chamber (see shaded area).

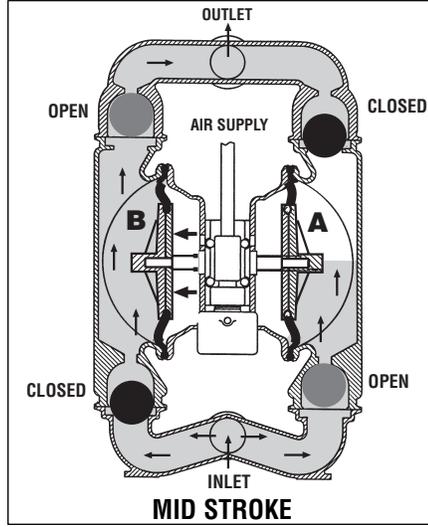


FIGURE 2 When the pressurized diaphragm, diaphragm A, reaches the limit of its discharge stroke, the air valve redirects pressurized air to the back side of diaphragm B. The pressurized air forces diaphragm B away from the center block while pulling diaphragm A to the center block. Diaphragm B is now on its discharge stroke. Diaphragm B forces the inlet valve ball onto its seat due to the hydraulic forces developed in the liquid chamber and manifold of the pump. These same hydraulic forces lift the discharge valve ball off its seat, while the opposite discharge valve ball is forced onto its seat, forcing fluid to flow through the pump discharge. The movement of diaphragm A toward the center block of the pump creates a vacuum within liquid chamber A. Atmospheric pressure forces fluid into the inlet manifold of the pump. The inlet valve ball is forced off its seat allowing the fluid being pumped to fill the liquid chamber.

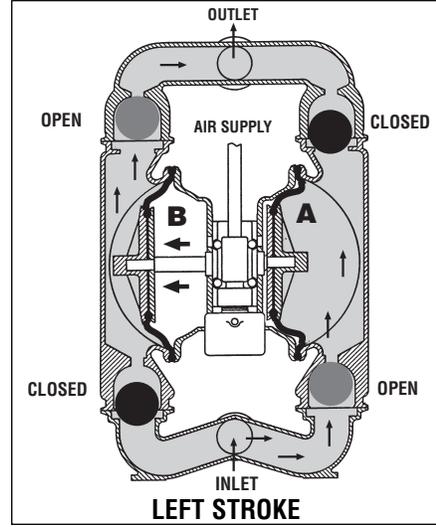


FIGURE 3 At completion of the stroke, the air valve again redirects air to the back side of diaphragm A, which starts diaphragm B on its exhaust stroke. As the pump reaches its original starting point, each diaphragm has gone through one exhaust and one discharge stroke. This constitutes one complete pumping cycle. The pump may take several cycles to completely prime depending on the conditions of the application.

SECTION 3

WILDEN MODEL T15 METAL CAUTIONS – READ FIRST!



TEMPERATURE LIMITS:

Saniflex™ -28.9°C to 104.4°C -20°F to 220°F
Teflon® PTFE 4.4°C to 104.4°C 40°F to 220°F



CAUTION: When choosing pump materials, be sure to check the temperature limits for all wetted components. Example: Viton® has a maximum limit of 176.7°C (350°F) but polypropylene has a maximum limit of only 79°C (175°F).



CAUTION: Maximum temperature limits are based upon mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperatures. Consult engineering guide for chemical compatibility and temperature limits.



CAUTION: Always wear safety glasses when operating pump. If diaphragm rupture occurs, material being pumped may be forced out air exhaust.



WARNING: Prevention of static sparking — If static sparking occurs, fire or explosion could result. Pump, valves, and containers must be properly grounded when handling flammable fluids and whenever discharge of static electricity is a hazard.



CAUTION: Do not exceed 8.6 bar (125 psig) air supply pressure. (3.4 bar [50 psig] on UL models.)



CAUTION: Before any maintenance or repair is attempted, the compressed air line to the pump should be disconnected and all air pressure allowed to bleed from pump. Disconnect all intake, discharge and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container.



CAUTION: Blow out air line for 10 to 20 seconds before attaching to pump to make sure all pipe line debris is clear. Use an in-line air filter. A 5µ (micron) air filter is recommended.



NOTE: When installing Teflon® diaphragms, it is important to tighten outer pistons simultaneously (turning in opposite directions) to ensure tight fit.



WARNING: Tighten all clamp bands and retainers prior to installation. Fittings may loosen during transportation.



NOTE: Before starting disassembly, mark a line from each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly.



CAUTION: Verify the chemical compatibility of the process and cleaning fluid to the pump's component materials in the Chemical Resistance Guide (see E4).



CAUTION: When removing the end cap using compressed air, the air valve end cap may come out with considerable force. Hand protection such as a padded glove or rag should be used to capture the end cap.



NOTE: All non lube-free air-operated pumps must be lubricated. Wilden suggests an arctic 5 weight oil (ISO grade 15). Do not over-lubricate pump. Over-lubrication will reduce pump performance.




NOTE: UL-listed pumps must not exceed 3.4 bar (50 psig) air supply pressure.



CAUTION: Only explosion proof (NEMA 7) solenoid valves should be used in areas where explosion proof equipment is required.

SECTION 4A

DIMENSIONAL DRAWING WILDEN MODEL T15 METAL

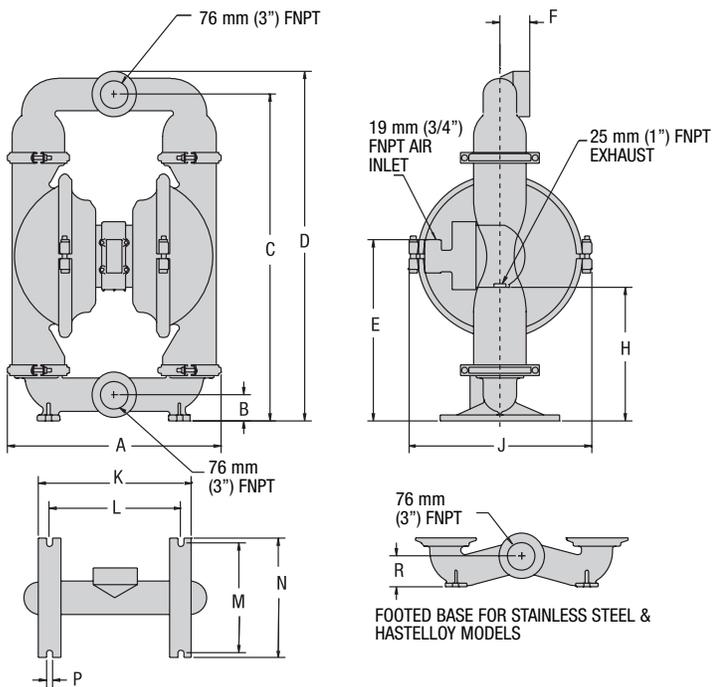


DIMENSIONS – T15 METAL		
ITEM	METRIC (mm)	STANDARD (inch)
A	505	19.9
B	60	2.3
C	761	30.0
D	822	32.4
E	418	16.5
F	71	2.8
H	313	12.3
J	426	16.8
K	360	14.2
L	305	12.0
M	258	10.2
N	282	11.1
P	16	0.6
R	70	2.8

BSP threads available.

SECTION 4B

DIMENSIONAL DRAWING WILDEN MODEL T15 METAL BIOPHARM

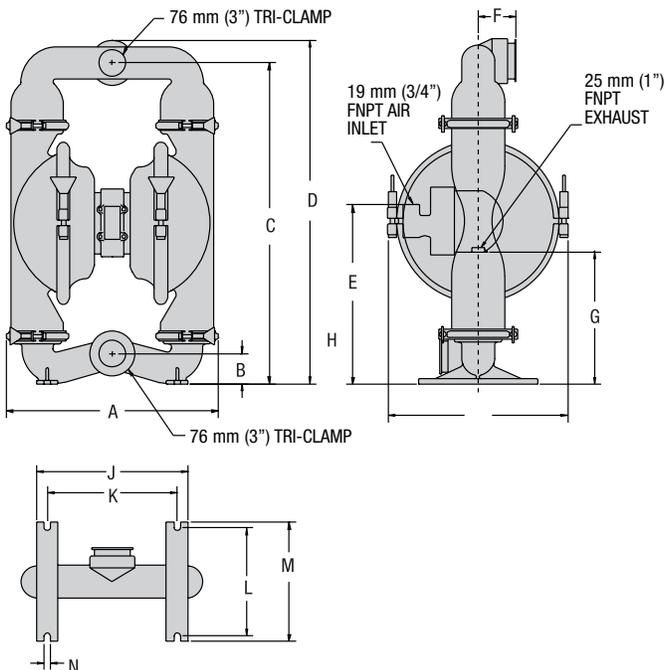

DIMENSIONS – T15 BIOPHARM		
ITEM	METRIC (mm)	STANDARD (inch)
A	520	20.5
B	71	2.8
C	766	30.2
D	811	31.9
E	420	16.5
F	89	3.5
G	312	12.3
H	432	17.0
J	355	14.0
K	305	12.0
L	256	10.9
M	278	11.0
N	14	0.6

SECTION 7A

INSTALLATION – T15 METAL AIR-OPERATED PUMPS

The Model T15 Metal pump has a 76 mm (3") inlet and 76 mm (3") outlet and is designed for flows to 704 lpm (186 gpm). The T15 Metal pump is manufactured with wetted parts of 316 Stainless Steel, or Hastelloy®. The center block of the T15 Metal is constructed of glass-filled polypropylene, aluminum, nickel-plated aluminum, Teflon®-coated aluminum or 316 Stainless Steel. A variety of diaphragms, valve balls, and o-rings are available to satisfy temperature, chemical compatibility, abrasion and flex concerns.

The suction pipe size should be at least 76 mm (3") diameter or larger if highly viscous material is being pumped. The suction hose must be non-collapsible, reinforced type as the T15 is capable of pulling a high vacuum. Discharge piping should be at least 76 mm (3"); larger diameter can be used to reduce friction losses. It is critical that all fittings and connections are airtight or a reduction or loss of pump suction capability will result.

INSTALLATION: Months of careful planning, study, and selection efforts can result in unsatisfactory pump performance if installation details are left to chance.

Premature failure and long term dissatisfaction can be avoided if reasonable care is exercised throughout the installation process.

LOCATION: Noise, safety, and other logistical factors usually dictate that "utility" equipment be situated away from the production floor. Multiple installations with conflicting requirements can result in congestion of utility areas, leaving few choices for siting of additional pumps.

Within the framework of these and other existing conditions, every pump should be located in such a way that key factors are balanced against each other to maximum advantage.

ACCESS: First of all, the location should be accessible. If it's easy to reach the pump, maintenance personnel will have an easier time carrying out routine inspections and adjustments. Should major repairs become necessary, ease of access can play a key role in speeding the repair process and reducing total downtime.

AIR SUPPLY: Every pump location should have an air line large enough to supply the volume of air necessary to achieve the desired pumping rate (see Section 5). Use air pressure up to a maximum of 8.6 bar (125 psig) depending upon pumping requirements.

For best results, the pumps should use a 5µ (micron) air filter, needle valve and regulator. The use of an air filter before the pump will insure that the majority of any pipeline contaminants will be eliminated.

SOLENOID OPERATION: When operation is controlled by a solenoid valve in the air line, three-way valves should be used, thus allowing trapped air to bleed off and improving pump performance. Pumping volume can be set by counting the number of strokes per minute and multiplying by displacement per stroke.

MUFFLER: Sound levels are reduced below OSHA specifications using the standard Wilden muffler element. Other mufflers can be used to further reduce sound levels, but they usually reduce pump performance.

ELEVATION: Selecting a site that is well within the pump's dynamic lift capability will assure that loss-of-prime troubles will be eliminated. In addition, pump efficiency can be adversely affected if proper attention is not given to elevation (see Section 5).

PIPING: Final determination of the pump site should not be made until the piping problems of each possible location have been evaluated. The impact of current and future installations should be considered ahead of time to make sure that inadvertent restrictions are not created for any remaining sites.

The best choice possible will be a site involving the shortest and the straightest hook-up of suction and discharge piping. Unnecessary elbows, bends, and fittings should be avoided. Pipe sizes should be selected so as to keep friction losses within practical limits. All piping should be supported independently of the pump. In addition, the piping should be aligned so as to avoid placing stresses on the pump fittings.

Expansion joints can be installed to aid in absorbing the forces created by the natural reciprocating action of the pump. If the pump is to be bolted down to a solid foundation, a mounting pad placed between the pump and foundation will assist in minimizing pump vibration. Flexible connections between the pump and rigid piping will also assist in minimizing pump vibration. If quick-closing valves are installed at any point in the discharge system, or if pulsation within a system becomes a problem, a surge suppressor should be installed to protect the pump, piping and gauges from surges and water hammer.

When pumps are installed in applications involving flooded suction or suction head pressures, a gate valve should be installed in the suction line to permit closing of the line for pump service.

The T15 can be used in submersible applications only when both wetted and non-wetted portions are compatible with the material being pumped. If the pump is to be used in a submersible application, a hose should be attached to the pump's air exhaust and the exhaust air piped above the liquid level.

If the pump is to be used in a self-priming application, be sure that all connections are airtight and that suction lift is within the pump's ability. Note: Materials of construction and elastomer material have an effect on suction lift parameters. Please refer to Section 6.

Pumps in service with a positive suction head are most efficient when inlet pressure is limited to .5–.7 bar (7–10 psig). Premature diaphragm failure may occur if positive suction is .7 bar (10 psig) and higher.


THE MODEL T15 WILL PASS 9.5 mm (3/8") SOLIDS. WHENEVER THE POSSIBILITY EXISTS THAT LARGER SOLID OBJECTS MAY BE SUCKED INTO THE PUMP, A STRAINER SHOULD BE USED ON THE SUCTION LINE.

CAUTION: DO NOT EXCEED 8.6 BAR (125 PSIG) AIR SUPPLY PRESSURE. (3.4 BAR [50 PSIG] FOR UL MODELS.)

PUMPS SHOULD BE THOROUGHLY FLUSHED WITH WATER BEFORE INSTALLING INTO PROCESS LINES. FDA AND USDA PUMPS SHOULD BE CLEANED AND/OR SANITIZED BEFORE USE ON EDIBLE PRODUCTS.

BLOW OUT AIR LINE FOR 10 TO 20 SECONDS BEFORE ATTACHING TO PUMP TO MAKE SURE ALL PIPE LINE DEBRIS IS CLEAR. ALWAYS USE AN IN-LINE AIR FILTER.

SUGGESTED INSTALLATION

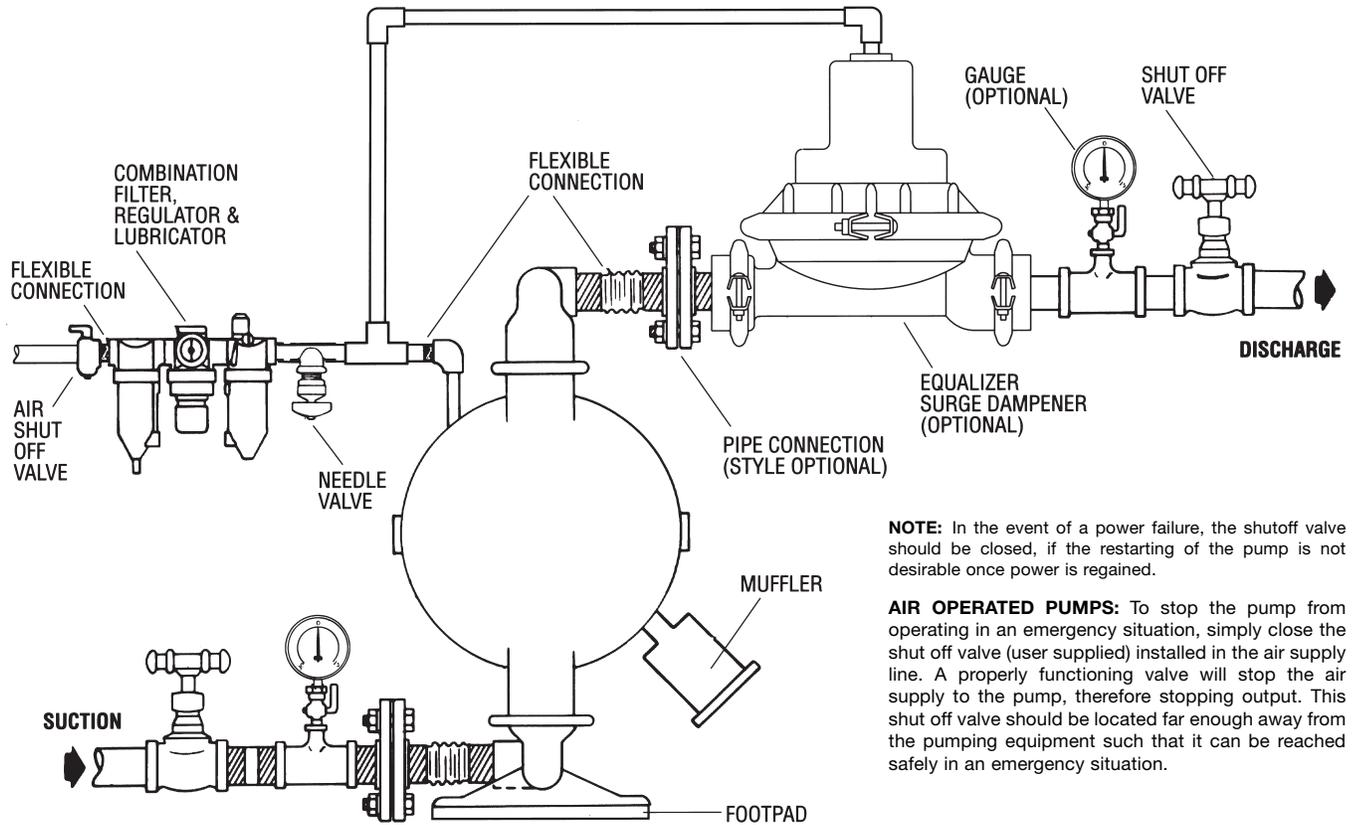

NOTE: In the event of a power failure, the shutoff valve should be closed, if the restarting of the pump is not desirable once power is regained.

AIR OPERATED PUMPS: To stop the pump from operating in an emergency situation, simply close the shut off valve (user supplied) installed in the air supply line. A properly functioning valve will stop the air supply to the pump, therefore stopping output. This shut off valve should be located far enough away from the pumping equipment such that it can be reached safely in an emergency situation.

SECTION 7B – AIR OPERATION

SUGGESTED OPERATION AND MAINTENANCE INSTRUCTIONS

OPERATION: Pump discharge rate can be controlled by limiting the volume and/or pressure of the air supply to the pump (preferred method). An air regulator is used to regulate air pressure. A needle valve is used to regulate volume. Pump discharge rate can also be controlled by throttling the pump discharge by partially closing a valve in the discharge line of the pump. This action increases friction loss which reduces flow rate. This is useful when the need exists to control the pump from a remote location. When the pump discharge pressure equals or exceeds the air supply pressure, the pump will stop; no bypass or pressure relief valve is needed, and pump damage will not occur. The pump has reached a “deadhead” situation and can be restarted by reducing the fluid discharge pressure or increasing the air inlet pressure. The Wilden T15 pump runs solely on compressed air and does not generate heat, therefore your process fluid temperature will not be affected.

RECORDS: When service is required, a record should be made of all necessary repairs and replacements. Over a period of time, such records can become a valuable tool for predicting and preventing future maintenance problems and unscheduled downtime. In addition, accurate records make it possible to identify pumps that are poorly suited to their applications.

MAINTENANCE AND INSPECTIONS: Since each application is unique, maintenance schedules may be different for every pump. Frequency of use, line pressure, viscosity and abrasiveness of process fluid all affect the parts life of a Wilden pump. Periodic inspections have been found to offer the best means for preventing unscheduled pump downtime. Personnel familiar with the pump’s construction and service should be informed of any abnormalities that are detected during operation.

SECTION 7C – AIR-CONTROLLED TROUBLESHOOTING

Pump will not run or runs slowly.

1. Check air inlet screen and air filter for debris.
2. Check for sticking air valve, flush air valve in solvent.
3. Check for worn out air valve. If piston face in air valve is shiny instead of dull, air valve is probably worn beyond working tolerances and must be replaced.
4. Check center block Glyd™ rings. If worn excessively, they will not seal and air will simply flow through pump and out air exhaust. Use only Wilden Glyd™ rings as they are of special construction.
5. Check for rotating piston in air valve.
6. Check type of lubricant being used. A higher viscosity oil than suggested may cause the piston to stick or run erratically. Wilden suggests the use of an oil with arctic characteristics (ISO 15-5 wt.).

Pump runs but little or no product flows.

1. Check for pump cavitation; slow pump speed down to match thickness of material being pumped.
2. Check for sticking ball check valves. If material being pumped is not compatible with pump elastomers swelling may occur. Replace ball check valves and o-rings with the proper elastomers.

3. Check to make sure all suction connections are air tight, especially clamp bands around intake balls.

Pump air valve freezes.

1. Check for excessive moisture in compressed air. Either install dryer or hot air generator for compressed air.

Air bubbles in pump discharge.

1. Check for ruptured diaphragm.
2. Check tightness of clamp bands, especially at intake manifold.

Product comes out air exhaust.

1. Check for diaphragm rupture.
2. Check tightness of piston plates to shaft.

Pump rattles.

1. See E9 Troubleshooting Guide.
2. Create false discharge head or suction lift.

SECTION 8A

MODEL T15 METAL DIRECTIONS FOR DISASSEMBLY/REASSEMBLY

CAUTION: Before any maintenance or repair is attempted, the compressed air line to the pump should be disconnected and all air pressure allowed to bleed from the pump. Disconnect all intake, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Be aware of any hazardous effects of contact with your process fluid.

The Wilden T15 has a 76 mm (3") inlet and 76 mm (3") outlet and is designed for flows up to 704 lpm (186 gpm). The T15 is available in 316 stainless steel or Hastelloy® wetted parts. The center block is available in polypropylene, aluminum, nickel-plated aluminum, and 316 stainless steel. Air valves come in brass, nickel-plated brass or 316 stainless steel. A variety of diaphragms, valve balls, valve seats and o-rings are available to satisfy temperature, chemical compatibility, abrasion and flex concerns. All o-rings used in the pump are of a special material and shore hardness that should only be replaced with factory-supplied parts.

TOOLS REQUIRED:

Adjustable Wrench

1¹/₆" Box Socket


3/4" Box Wrench

3/4" Socket

Adjustable Wrench

Vise equipped with soft jaws (such as plywood, plastic or other suitable material)

NOTE: The model used for these instructions incorporates rubber diaphragms, balls, and seats. Models with Teflon® diaphragms, balls and seats are the same except where noted.

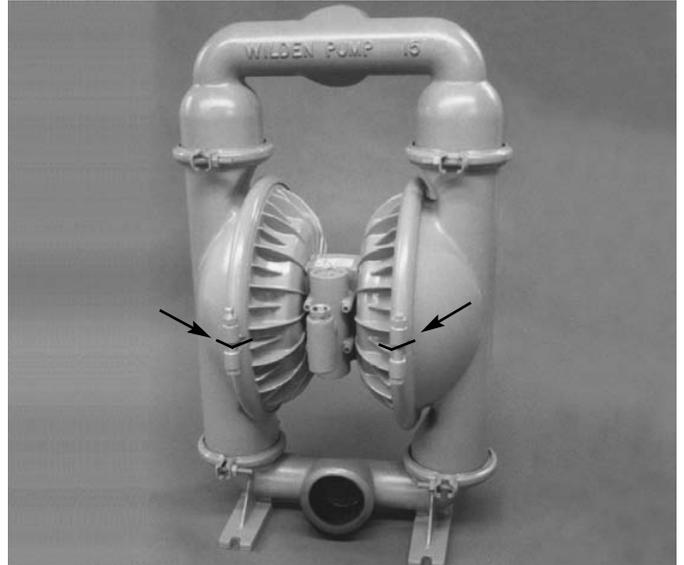


DISASSEMBLY:

Figure 1

Step 1.


Before starting disassembly, mark a line from each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly. (Figure 1)

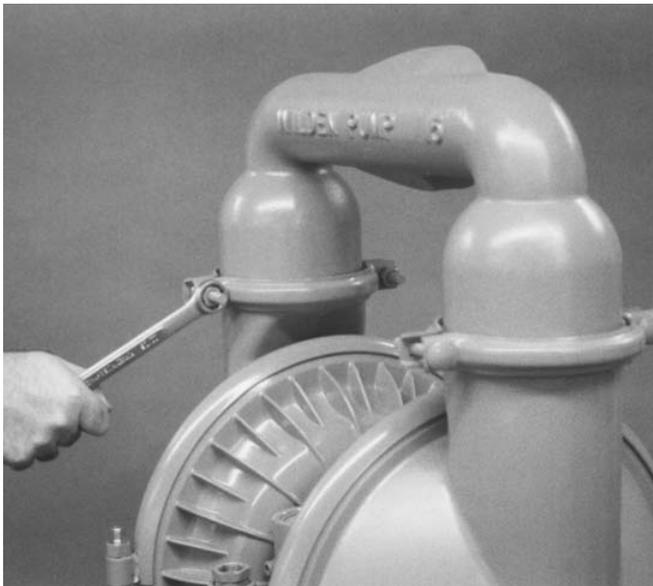

Step 2.

Figure 2


Utilizing the 1¹/₆" box wrench, remove the two small clamp bands that fasten the discharge manifold to the liquid chambers. (Figure 2)

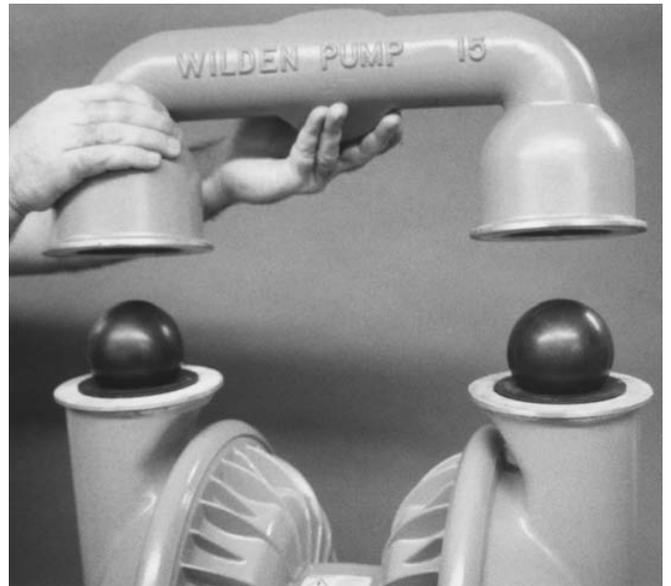


Step 3.

Figure 3


Remove the discharge manifold to expose the valve balls and seats. Inspect the ball cage area of the manifold for excessive wear or damage. Remove the discharge valve balls, seats and o-rings from the discharge manifold and inspect for nicks, gouges, chemical attack or abrasive wear. Replace worn parts with genuine Wilden parts for reliable performance. Teflon® o-rings should be replaced when reassembled. (Figure 3)

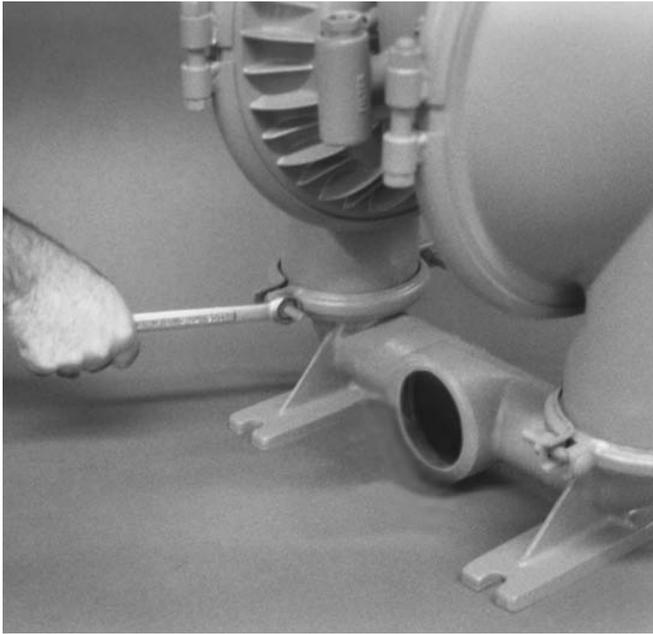

Step 4. *Figure 4*
Remove the two small clamp bands that fasten the intake manifold to the liquid chambers. (*Figure 4*)

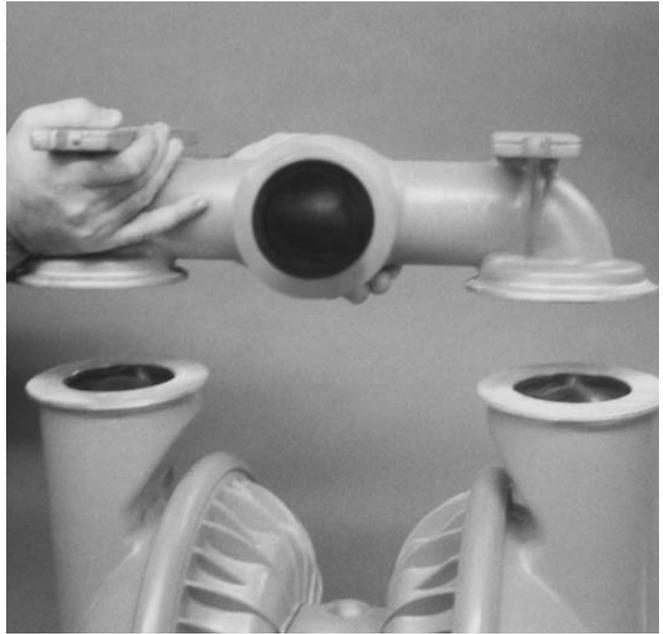

Step 5. *Figure 5*
Lift the intake manifold away to expose the valve balls and seats. Inspect intake valve ball cage for excessive wear or damage. Remove the intake valve balls, seats and o-rings from the discharge manifold and inspect for nicks, gouges, chemical attack or abrasive wear. Replace worn parts with genuine Wilden parts for reliable performance. Teflon® o-rings should be replaced when reassembled. (*Figure 5*)

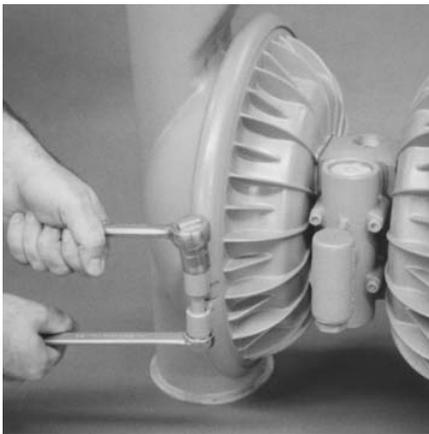

Step 6. *Figure 6*
With $\frac{3}{4}$ " socket and $\frac{3}{4}$ " box wrench, remove one set of large clamp bands that attach liquid chamber to center section assembly. (*Figure 6*)



Step 7. *Figure 7*
Lift liquid chamber away from center section to expose diaphragm and outer piston. (*Figure 7*)




Step 8. *Figure 8*
Using an adjustable wrench, or by rotating the diaphragm by hand, remove the diaphragm assembly. (*Figure 8*)



Step 9A. *Figure 9A*

NOTE: Due to varying torque values, one of the following two conditions may occur: 1) The outer piston, diaphragm and inner piston remain attached to the shaft and the entire assembly can be removed from the center section. (*Figure 9a*)

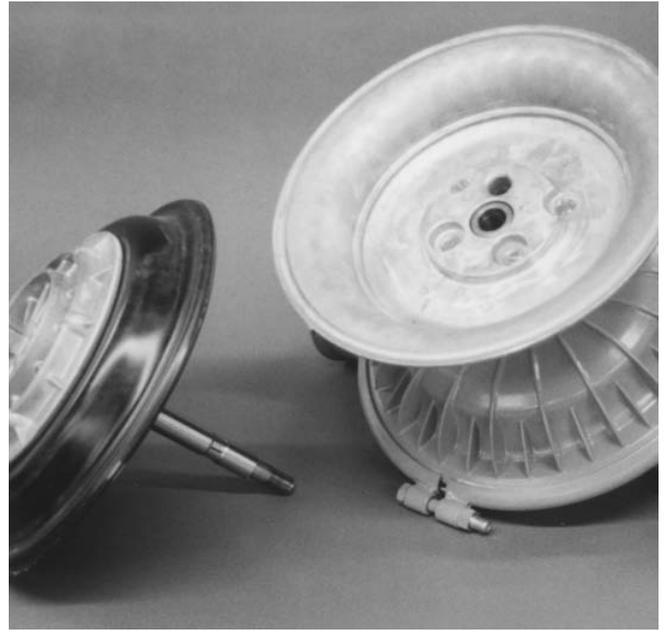

Step 9B. *Figure 9B*

2) The outer piston, diaphragm, and inner piston separate from the shaft which remains connected to the opposite side diaphragm assembly (*Figure 9B*). Repeat disassembly instructions for opposite liquid chamber. Inspect diaphragm assembly and shaft for signs of wear or chemical attack. Replace all worn parts with genuine Wilden parts for reliable performance.



Step 10. *Figure 10*

Use a socket wrench to disassemble the diaphragm assembly if replacement is necessary. (*Figure 10*)



Step 11. *Figure 11*

To remove diaphragm assembly from shaft, secure shaft with soft jaws (a vise fitted with plywood, plastic, or other suitable material) to ensure shaft is not nicked, scratched or gouged. Using an adjustable wrench, remove diaphragm assembly from shaft. (*Figure 11*)

SECTION 8B

TURBO-FLO™ AIR VALVE / CENTER BLOCK DISASSEMBLY

The air valve assembly consists of both the air valve body and piston and the center block. The unique design of the air valve relies only on differential pressure to effect the diaphragm shift. It is reliable and simple to maintain. The bushing in the center block, along with the diaphragm shaft, provides the “trigger” to tell the air valve to shift. The following procedure will ensure that the air valve on your Wilden pump will provide long trouble-free service.

AIR VALVE BODY AND PISTON ASSEMBLY AND DISASSEMBLY:

The air valve body and piston can be disconnected from the pump by removing the four socket head cap screws which attach it to the center block. The piston in the air valve is aluminum with a dark gray anodized coating. The piston should move freely and the ports in the piston should line up with the ports on the face of the air valve body (see below). The piston should also appear to be a dull, dark gray in color. If the piston appears to be a shiny aluminum color, the air valve is probably worn beyond working tolerance and should be replaced.

If the piston does not move freely in the air valve, the entire air valve should be immersed in a cleaning solution.

NOTE: Do not force the piston by inserting a metal object. This soaking should remove any accumulation of sludge and grit which is preventing the air valve piston from moving freely. Also, remove and clean the air valve screen. If the air valve piston does not move freely after the above cleaning, the air valve should be disassembled as follows: remove the snap ring from the top end of the air valve cylinder and apply an air jet to the 3/16-inch hole on the opposite end of the air valve face. (See *Figure C*.) **CAUTION:** The air valve end cap may come out with considerable force. Hand protection such as a padded glove or rag should be used to capture the end cap.

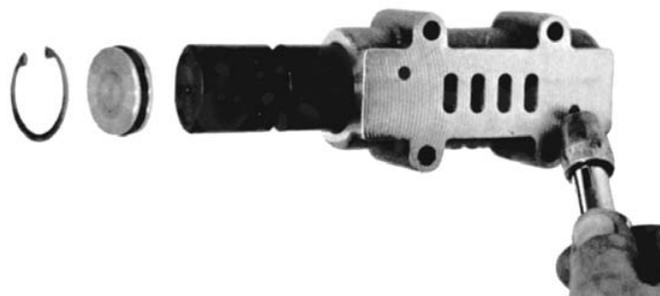


Figure C


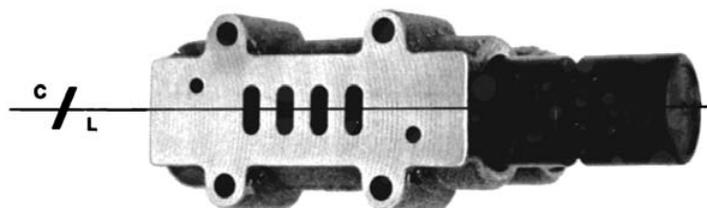


Figure D

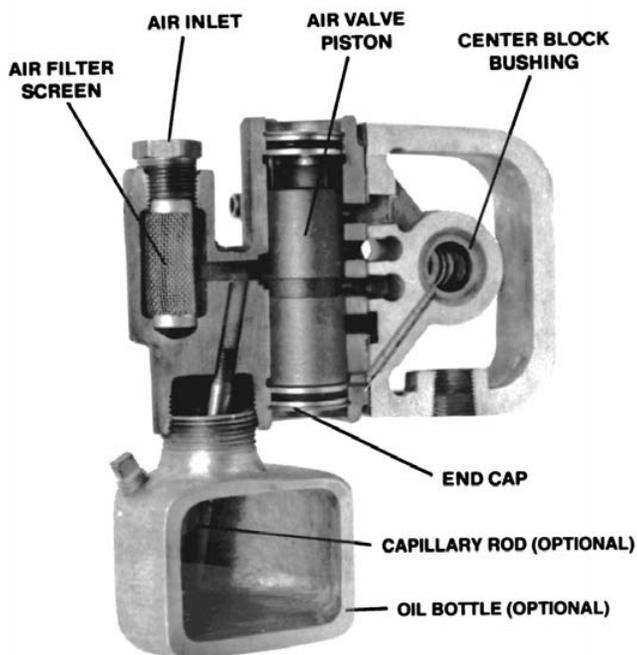

NOTE: Air valve available with or without oil bottle and capillary rod.

Figure B

Small nicks can usually be dressed out and the piston returned to service. Make sure that the guide pin is straight and smooth or the piston will not move freely in the cylinder. Clean out anti-centering pin holes located at each side of the piston. Pin holes are located on each side of the annular groove on the top of the piston and travel to each end. New o-rings should be installed on the end caps. Lubricate the o-rings and install the end caps, assuring that proper alignment of the piston and cylinder ports is maintained. (See *Figure D*). Reinstall air valve to center block of pump. Tighten per the torque specifications in Section 8C (page 14).

GLYD™ RING REPLACEMENT:

When the Glyd™ rings become worn, they will no longer seal and must be replaced. Due to the design characteristics of the Glyd™ rings, it is suggested that you use the Ringer Seal installation kit when replacing Glyd™ rings (P/N 15-9341-99). Consult EOM-Ringer for installation instructions.

CENTER BLOCK ASSEMBLY:

The pump's center block consists of a polypropylene or die cast housing with a cast-in bronze bushing. The bushing has eleven grooves cut on the inside diameter. There are seven Glyd™ rings that fit in these grooves (see *Figure E*). Since these Glyd™ rings form a part of the shifting function of the pump, it is necessary that they be located in the proper grooves. The bronze bushing is replaceable in cast iron or stainless steel center blocks only. When bushing wear becomes excessive, a new center block must be used.

Grooves in bushing which contain Glyd™ rings

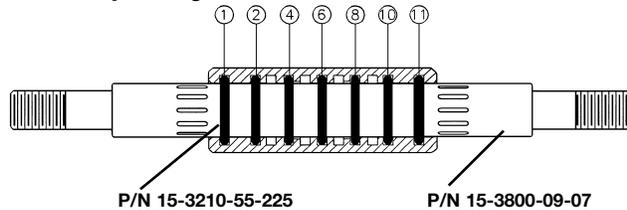
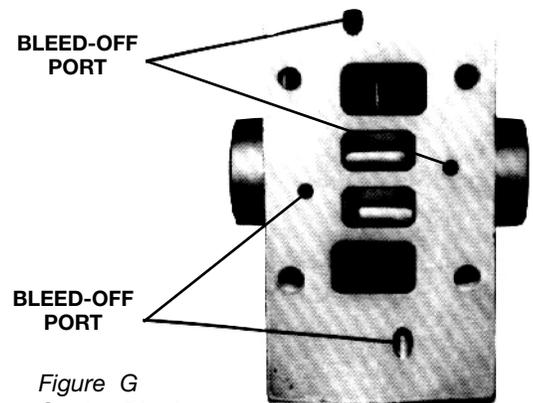


Figure E



Figure F (Side View)

P/N 15-3300-07 Bronze Bushing can be pressed into a stainless steel or cast iron center section. (See *Figure F*). When installing a new bushing, four bleeder holes which allow the pump to exhaust air must be drilled. A 7/32" drill should be used. (See *Figure G*).



*Figure G
Center Block
(Front View)*

SECTION 8C

REASSEMBLY HINTS & TIPS

ASSEMBLY:


Upon performing applicable maintenance to the air distribution system, the pump can now be reassembled. Please refer to the disassembly instructions for photos and parts placement. To reassemble the pump, follow the disassembly instructions in reverse order. The air distribution system needs to be assembled first, then the diaphragms and finally the wetted path. Failure to replace worn parts with genuine Wilden parts will nullify any warranty offered by WILDEN PUMP & ENGINEERING, LLC. Please find the applicable torque specifications on this page. The following tips will assist in the assembly process.

- Clean the inside of the center section shaft bushing to ensure no damage is done to new seals.
- Stainless bolts should be lubed to reduce the possibility of seizing during tightening.
- Level the water chamber side of the intake/discharge manifolds to ensure a proper sealing surface. This is most easily accomplished by placing them on a flat surface prior to tightening their clamp bands to the desired torque. (See this page for torque specifications.)
- Be sure to tighten outer pistons simultaneously on Teflon®-fitted pumps to ensure proper torque values.
- Place one liquid chamber on its side and align center section with chamber using alignment marks made during disassembly before tightening large clamp bands. Push down on opposite side diaphragm assembly until diaphragm is inverted. Place opposite liquid chamber on center section and align.

MAXIMUM TORQUE SPECIFICATIONS

Description of Part	Metal Pumps
Air Valve	9.0 N•m [80 in.-lbs.]
Outer Piston	105.8 N•m [78 ft.-lbs.]
Small Clamp Band (Teflon®-fitted)	15.5 N•m [137 in.-lbs.]
Large Clamp Band (All)	47.4 N•m [35 ft.-lbs.]
Air Chambers	27 N•m [20 ft.-lbs.]
Center Block Assembly	27 N•m [20 ft.-lbs.]
2C-Ring Inner Piston	19.0 N•m [14 ft.-lbs.]


EXPLODED VIEW (TEFLON® DIAPHRAGMS)

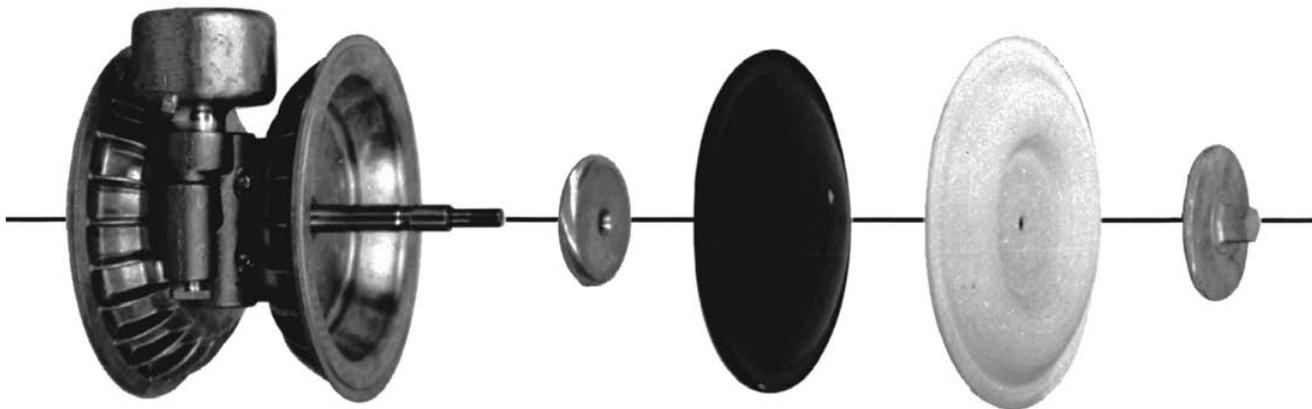

SECTION 9A

EXPLODED VIEW/PARTS LISTING

T15 METAL AIR-OPERATED TEFLON®- FITTED

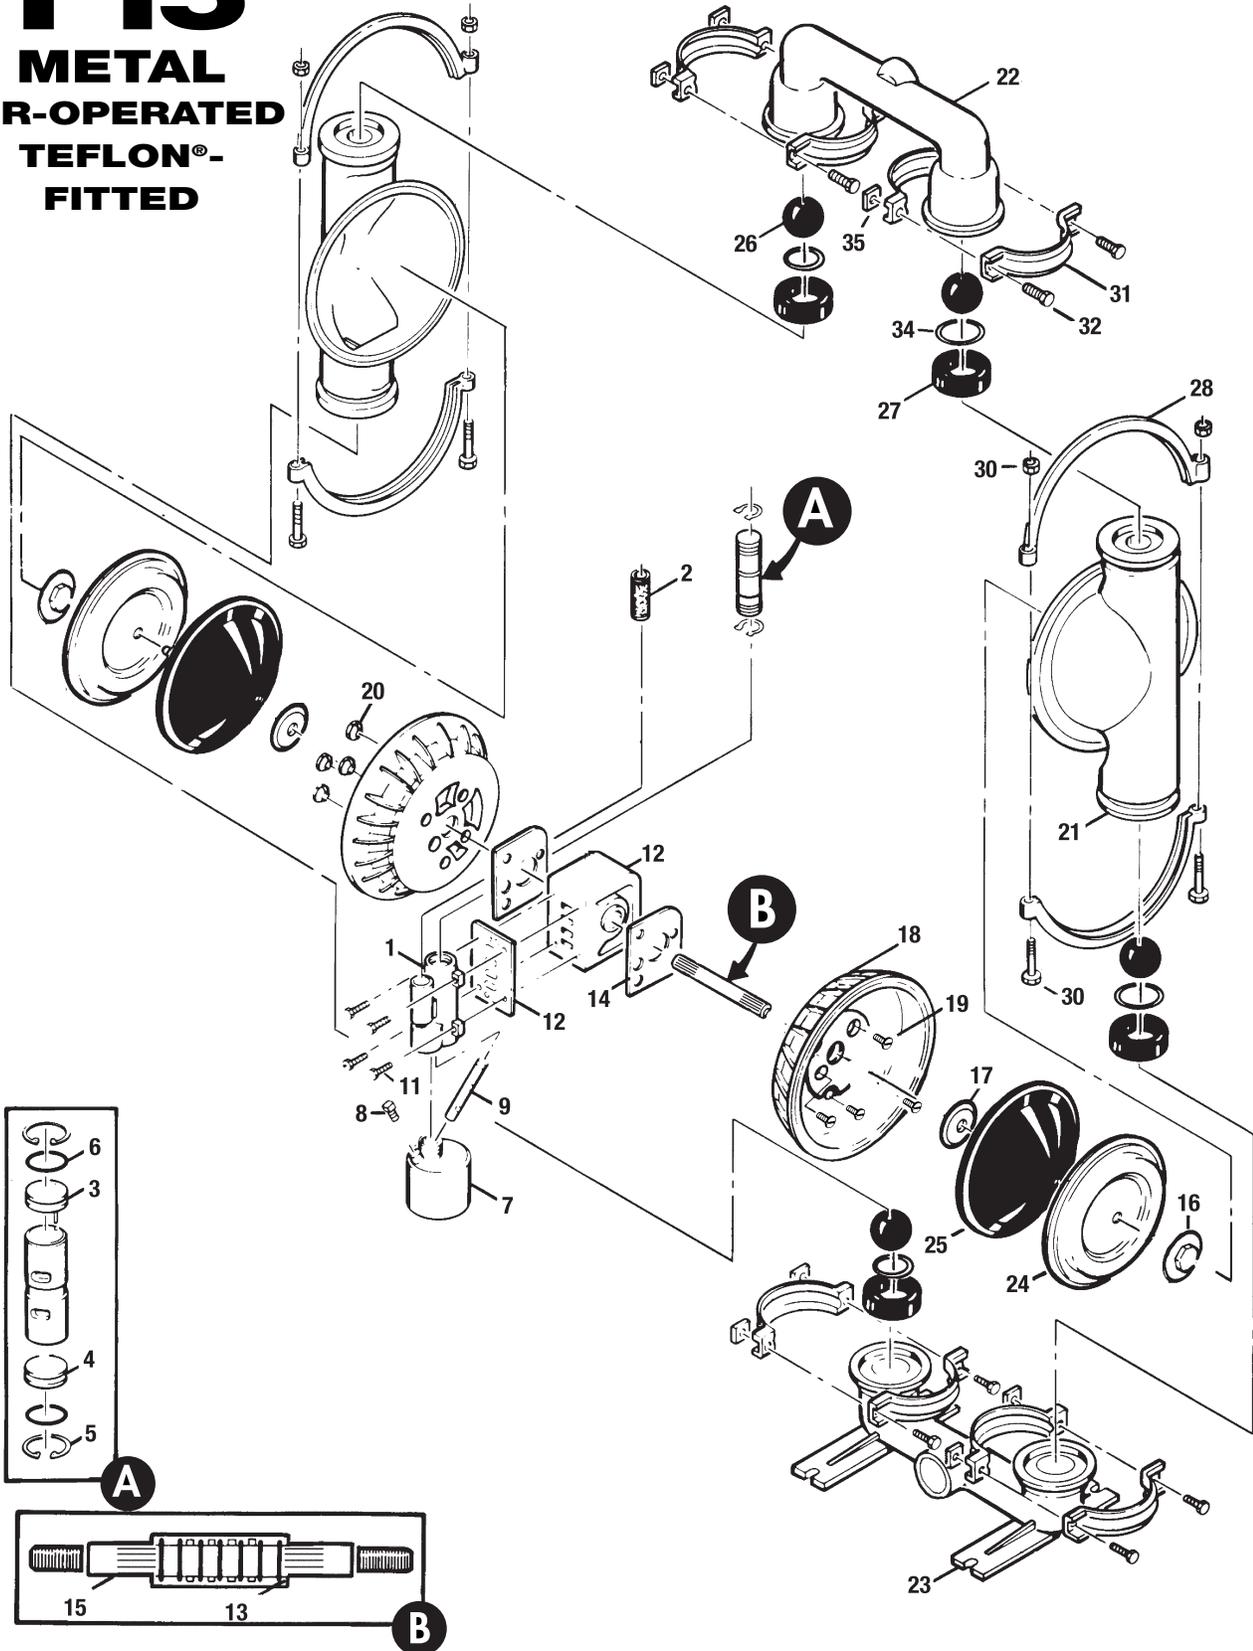

WILDEN MODEL T15 METAL TEFLON®-FITTED

Item	Description	Qty.	T15/ HAPB/900	T15/ HSSB/900	T15/ HWPB/900	T15/ SAPB/900	T15/ SSSB/900	T15/ SWPB/900	T15/ SSSS/900	T15/ SSSN/903	
			P/N	P/N	P/N	P/N	P/N	P/N	P/N	P/N	
1	Air Valve Assembly¹	1	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-03	15-2000-06
2	Air Valve Screen	1	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-03	08-2500-03
3	Air Valve End Cap w/Guide (top)	1	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-03	15-2300-23
4	Air Valve End Cap without Guide (bottom)	1	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-03	15-2330-23
5	Air Valve Snap Ring	2	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03
6	Air Valve Cap O-Ring	2	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52
7	Oil Bottle (Optional)	1	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	N/A	N/A
8	Plug (Optional)	1	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	N/A	N/A
9	Capillary Rod (Optional)	1	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	N/A	N/A
10	Air Valve Gasket — Buna-N	1	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52
11	Air Valve Screw	4	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03
12	Center Block	1	115-3100-20-225	15-3100-03-225	15-3100-20-225	15-3100-20-225	15-3100-03-225	15-3100-20-225	15-3100-03-225	15-3100-03-225	15-3100-03-225
13	Center Block Glyd™ Ring	7	115-3210-55-225	15-3210-55-225							
14	Block Gasket — Buna-N	2	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52
15	Shaft	1	115-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07
16	Piston, Outer	2	15-4600-04	15-4600-04	15-4600-04	15-4600-03	15-4600-03	15-4600-03	15-4600-03	15-4600-03	15-4600-03
17	Piston, Inner	2	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03
18	Air Chamber	2	15-3650-01	15-3650-03	15-3650-02	15-3650-01	15-3650-03	15-3650-02	15-3650-03	15-3650-03	15-3650-03
19	Air Chamber Screw	4	15-6200-08	15-6200-03	15-6200-08	15-6200-08	15-6200-03	15-6200-08	15-6200-03	15-6200-03	15-6200-03
20	Air Chamber Cone Nut	4	08-6550-08	08-6550-03	08-6550-08	08-6550-08	08-6550-03	08-6550-08	08-6550-03	08-6550-03	08-6550-03
21	Liquid Chamber	2	15-5000-04	15-5000-04	15-5000-04	15-5000-03	15-5000-03	15-5000-03	15-5000-03	15-5000-03	15-5000-03
22	Discharge Manifold	1	15-5020-04	15-5020-04	15-5020-04	15-5020-03	15-5020-03	15-5020-03	15-5020-03	15-5020-03	15-5020-03-70
23	Inlet Manifold	1	15-5080-04	15-5080-04	15-5080-04	15-5080-03	15-5080-03	15-5080-03	15-5080-03	15-5080-03	15-5080-03-70
24	Diaphragm	2	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55
25	Back-up Diaphragm	2	15-1060-56	15-1060-56	15-1060-56	15-1060-56	15-1060-56	15-1060-56	15-1060-56	15-1060-56	15-1060-56
26	Valve Ball	4	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55
27	Valve Seat	4	15-1121-04	15-1121-04	15-1121-04	15-1121-03	15-1121-03	15-1121-03	15-1121-03	15-1121-03	15-1121-03
28	Large Clamp Band Assy.	2	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03-70
29	Large Carriage Bolt	4	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03
30	Large Hex Nut ²	4	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6670-03-702
31	Small Clamp Band Assy.	4	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03-70
	Washer, Flat, 7/8" (not shown)	4	115-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70
32	Small Carriage Bolt	8	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03
33	Small Hex Nut ²	8	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6670-03-723
34	Teflon® Valve Seat O-Ring	4	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55
	Muffler (not shown)	1	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99
	Washer, Flat (not shown)	8	008-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70

¹Air Valve Assembly includes parts thru 15-2390-52.

²T15/SSSN pump large clamp band comes with 15-6670-03-70 wing nut and 15-6720-07-70 washer.

³T15/SSSN pump small clamp band comes with 08-6670-03-72 wing nut and 08-6720-07-70 washer.

All boldface items are primary wear parts.

SECTION 9B

MATERIAL CODE DESIGNATIONS

Material Code	Material Description	Material Code	Material Description
01	Aluminum	51	Neoprene
02	Cast Iron	52	Buna-N / Nitrile
03	Stainless Steel	53	Viton® / FKM
04	Hastelloy®	54	Nordel® / EPDM
05	Teflon® coated	55	Teflon® / PTFE
06	Electroless, nickel plated	56	Saniflex™ / Hytrel
07	Brass	57	FDA Wil-Flex™
08	Alloy Steel	58	Wil-Flex™
09	Mild steel, chrome plated	59	Teflon® encapsulated silicone
10	Stainless steel, polished	60	Teflon® encapsulated Viton®
11	Aluminum, anodized	61	Buna-N high temp.
12	Cardboard	62	Polyurethane - ether
13	Acetal	63	50/50 Wil-Flex™
14	Plexiglass®	64	PTFE/Neoprene laminate
16	Acetal, carbon filled	65	Isoplast®
17	Polyvinyl Chloride (PVC)	66	Delrin® AF
20	Polypropylene	67	R.T.P.
21	Kynar®/PVDF	68	FDA Viton®
22	Teflon®/PFA	69	FDA Buna-N
23	Nylon	70	Isoplast®, SS filled
24	Phenolic	71	Verton®
26	Polyethylene	72	PTFE/EPDM laminate
28	Nylon, graphite filled	73	HALAR® coated aluminum
29	Nylon, clear	74	FDA EPDM
30	Cellulose fiber	75	Polyetheretherketone (PEEK), carbon filled
31	Armstrong N8090	76	Polyetherimide (PEI)
32	UHMW Polyethylene	77	Polyphenylene sulfide (PPS), glass filled
33	Chemraz®	78	Vinyl ester, glass filled
34	Fluoro-Seal™	79	G-10 fiberglass
37	Turcite®	81	EPDM/PTFE laminate
48	Expanded PTFE	82	Viton/PTFE laminate
49	Polyurethane	99	Multiple materials/Assemblies
50	Polyurethane - ester		

WARRANTY

Each and every product manufactured by Wilden Pump and Engineering, LLC is built to meet the highest standards of quality. Every pump is functionally tested to insure integrity of operation.

Wilden Pump and Engineering, LLC warrants that pumps, accessories and parts manufactured or supplied by it to be free from defects in material and workmanship for a period of five (5) years from date of installation or six (6) years from date of manufacture, whichever comes first. Failure due to normal wear, misapplication, or abuse is, of course, excluded from this warranty.

Since the use of Wilden pumps and parts is beyond our control, we cannot guarantee the suitability of any pump or part for a particular application and Wilden Pump and Engineering, LLC shall not be liable for any consequential damage or expense arising from the use or misuse of its products on any application. Responsibility is limited solely to replacement or repair of defective Wilden pumps and parts.

All decisions as to the cause of failure are the sole determination of Wilden Pump and Engineering, LLC.

Prior approval must be obtained from Wilden for return of any items for warranty consideration and must be accompanied by the appropriate MSDS for the product(s) involved. A Return Goods Tag, obtained from an authorized Wilden distributor, must be included with the items which must be shipped freight prepaid.

The foregoing warranty is exclusive and in lieu of all other warranties expressed or implied (whether written or oral) including all implied warranties of merchantability and fitness for any particular purpose. No distributor or other person is authorized to assume any liability or obligation for Wilden Pump and Engineering, LLC other than expressly provided herein.


PLEASE PRINT OR TYPE AND FAX TO WILDEN

PUMP INFORMATION			
Item # _____		Serial # _____	
Company Where Purchased _____			
YOUR INFORMATION			
Company Name _____			
Industry _____			
Name _____		Title _____	
Street Address _____			
City _____		State _____	Postal Code _____
Country _____			
Telephone _____		Fax _____	E-mail _____
Web Address _____			
Number of pumps in facility? _____		Number of Wilden pumps? _____	
Types of pumps in facility (check all that apply): <input type="checkbox"/> Diaphragm <input type="checkbox"/> Centrifugal <input type="checkbox"/> Gear <input type="checkbox"/> Submersible <input type="checkbox"/> Lobe			
<input type="checkbox"/> Other _____			
Media being pumped? _____			
How did you hear of Wilden Pump? <input type="checkbox"/> Trade Journal <input type="checkbox"/> Trade Show <input type="checkbox"/> Internet/E-mail <input type="checkbox"/> Distributor			
<input type="checkbox"/> Other _____			

ONCE COMPLETE, FAX TO (909) 783-3440

NOTE: WARRANTY VOID IF PAGE IS NOT FAXED TO WILDEN

WILDEN PUMP & ENGINEERING, LLC

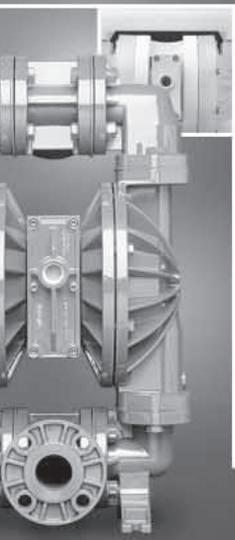

ADVANCED S E R I E S

Advance Your Process

- Advanced wetted path designs
- Lower the cost of operation
- Maximize product containment
- Longer MTBF (Mean Time Between Failures)
- Enhanced internal clearance
- The result of advanced thought

UNITEC™ S E R I E S

Enrich Your Process

- Simplicity of design
- Unique Technology
- Reliable, leak-free & quiet
- Validated & certified
- Intrinsically safe
- The result of unique thought



SANIFLO™ S A N I T A R Y P U M P T E C H N O L O G Y



Refine Your Process

- Designed for sanitary applications
- Minimize product degradation
- Improved production yields
- Easy to inspect, clean & assemble
- Minimized water requirements
- The result of progressive thought

ULTRAPURE™ T E F L O N P R O C E S S P U M P S

Optimize Your Process

- Validated & certified
- Clean room assembled
- Low particle count
- Compact, efficient & quiet
- Runs on clean-dry air
- The result of pure thought

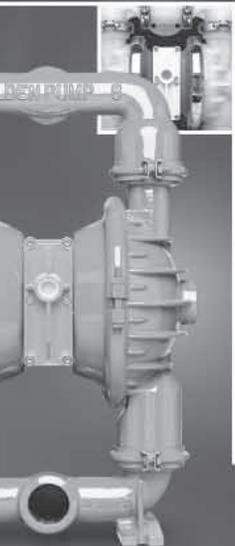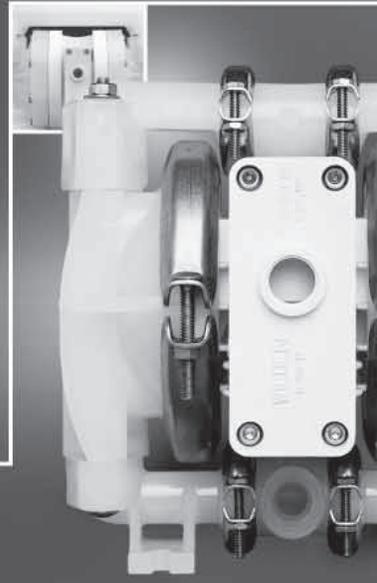

ORIGINAL S E R I E S

Simplify Your Process

- Long standing design simplicity
- Portable & submersible
- Variable connection options
- Fewest parts in industry
- Solutions since 1955
- The result of original thought


ACCESSORIES

Maximize Your Process

- Electronic control & monitoring
- Level control & containment
- Pulsation dampening
- Drum unloading systems
- Complete system solutions
- The result of innovative thought



Your Local Authorized Distributor:

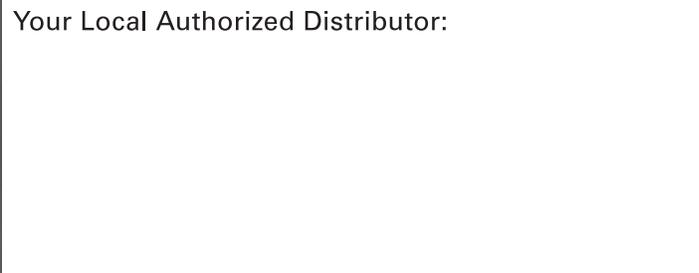

WILDEN®

A DOVER COMPANY

22069 VAN BUREN STREET • GRAND TERRACE, CA 92313-5607
(909) 422-1730 • FAX (909) 783-3440
www.wildenpump.com

Printed in the U.S.A.

Copyright 2005, Wilden Pump & Engineering, LLC